


HYBRID TRANSMISSION, PRIUS MOTOR/GENERATOR

N98-ND11082

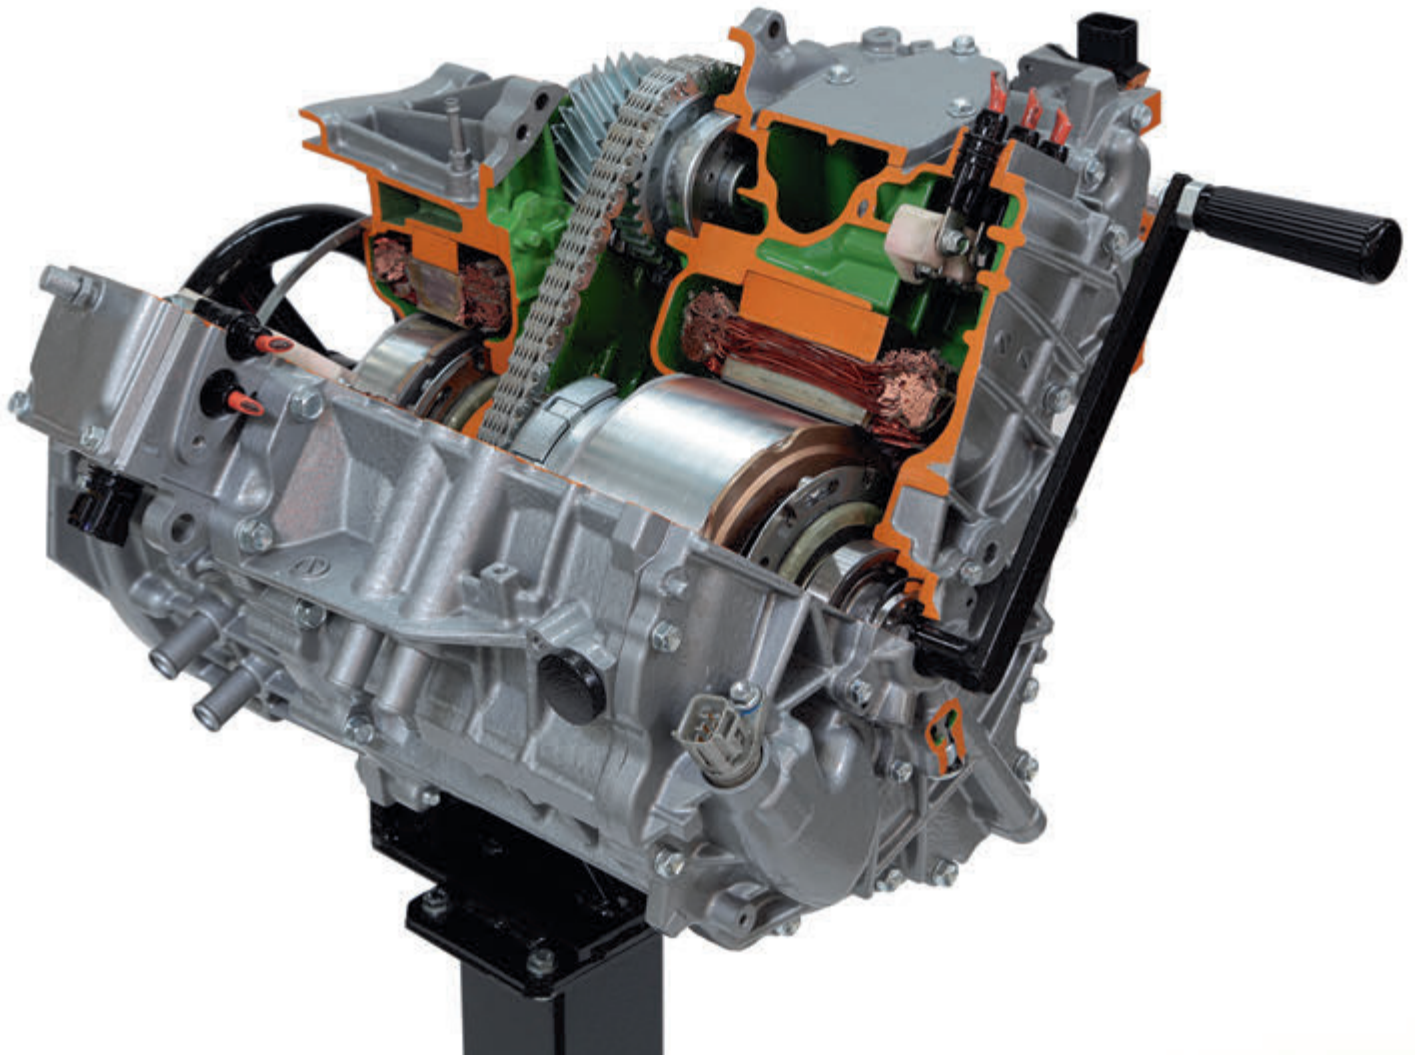

The Motor Generator 1 (MG1) operates as the control element for the power splitting planetary gear set. It recharges the HV battery and also supplies electrical power to drive Motor Generator 2 (MG2). MG1 effectively controls the continuously variable transmission (CVT) function of the transaxle and operates as the engine starter. The transmission is operated manually by hand crank, and it is mounted on a stand with wheels.

WEIGHT AND DIMENSIONS

60cm x 75cm x 65cm (L x W x H)

Net Weight: 100 kg

Gross Weight: 130 kg



MOUNTED ON STAND
WITH WHEELS

Version2.1.JL030916



LOOK US UP ONLINE