

Bio-energy Kit

Create electricity from ethanol and water



Direct Ethanol Fuel cell inside



Introducing a new power technology using mostly water, and drops of ethanol. This innovation could soon charge our portable electronics, and all kinds of remote devices. The Bio-energy educational and discovery kit is the first product of its kind, and gives us a close-up view of the possibilities.




Bio-energy Kit

Create electricity from ethanol and water



Direct Ethanol Fuel cell inside

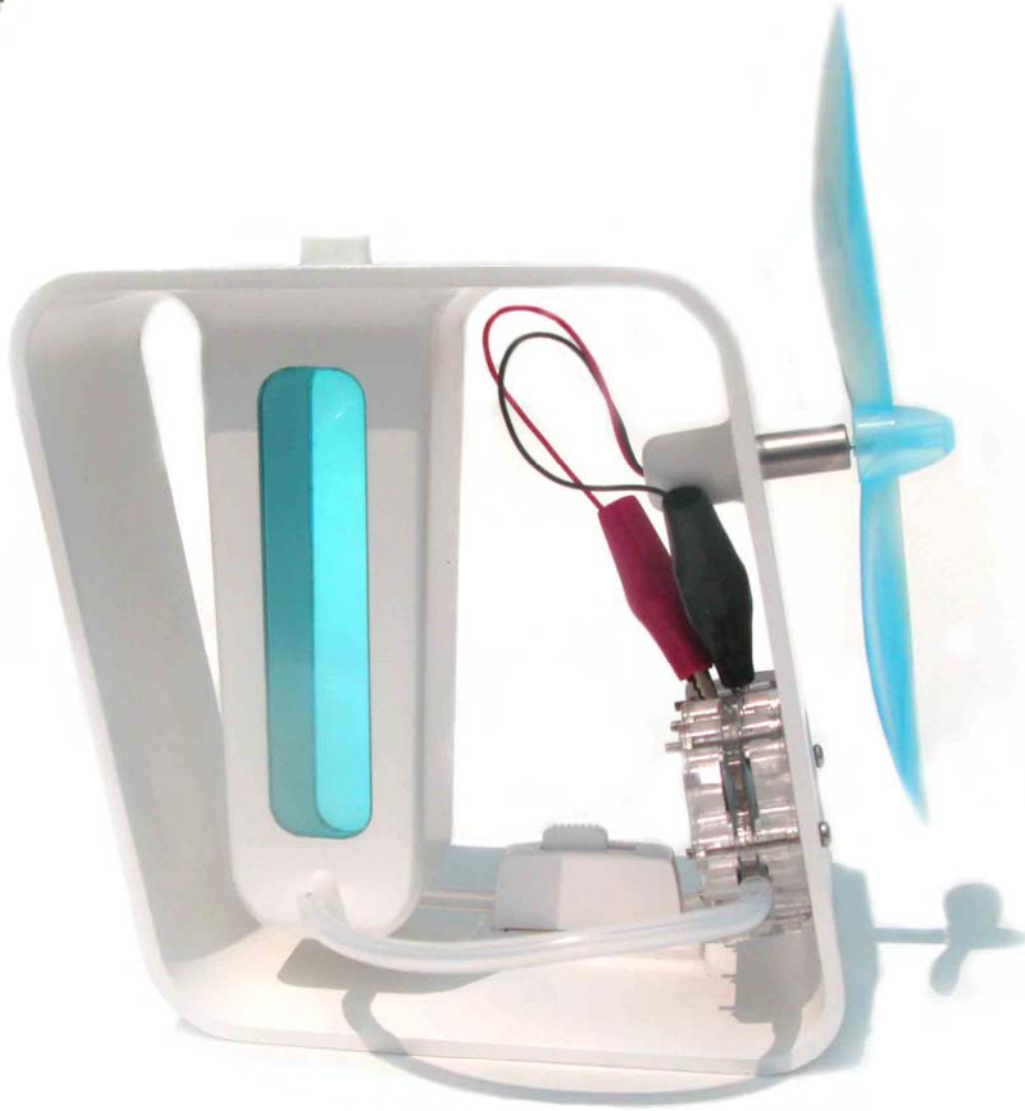

Horizon's new direct ethanol fuel cell is comprised of a small chamber within which the ethanol solution mix (90% water, 10% ethanol, similar to wine in alcohol content) is in contact with the cell's membrane on the anode side, while the cathode is open to the ambient air.

Electricity is produced as the wine-like solution slowly turns to vinegar until the solution is converted 100%. Once this process is completed, a purge mechanism allows "fresh" ethanol to flow into the reaction chamber, simultaneously expelling the used fuel.



Bio-energy Kit


Create electricity from ethanol and water

 Direct Ethanol Fuel cell inside



Powered by
Horizon

Experiment set and desktop fan able to run 8-12 hours with a few drops of ethanol. It is possible to experiment with any kind of alcohol solution between 10-15%. Manual included for set up and experiments.

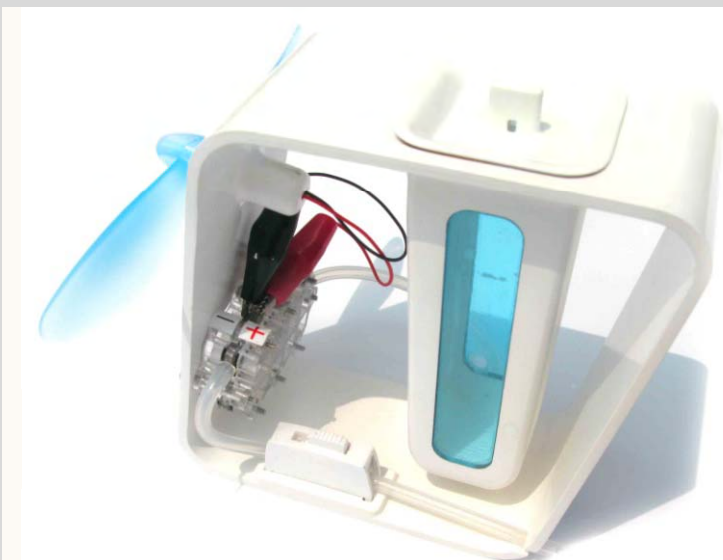

Bio-energy Kit

Create electricity from ethanol and water



Direct Ethanol Fuel cell inside



Reserve it now!

Online sales: www.horizonfuelcell.com/store.htm

Wholesale enquiries: dane@horizonfuelcell.com