


DIESEL INJECTION PUMP CUT-AWAY WITH INLINE 4 AND PNEUMATIC GOVERNOR, BOSCH

N98-ND10220

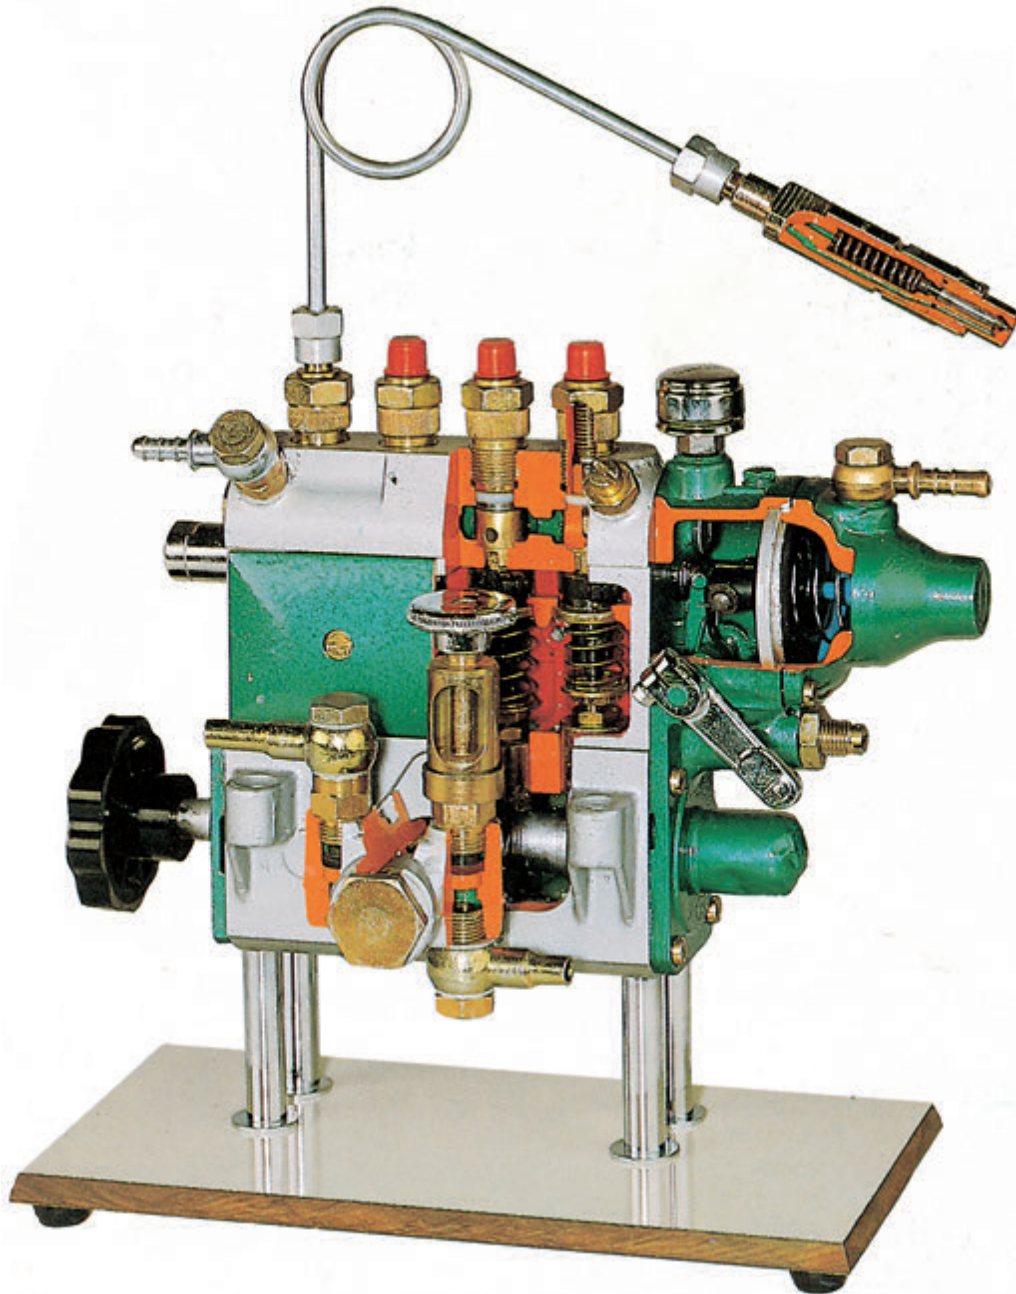

This injection pump model is suitable for use in a medium displacement engine (example: Fiat or Mercedes) and features a pneumatic speed governor (rock rod or acceleration rod controlled by a diaphragm connected to the suction collector). The injection pump is operated manually by crank handle and a feeding pump is included.

WEIGHT AND DIMENSIONS

20cm x 30cm x 30cm (L x W x H)

Net Weight: 7 kg

Gross Weight: 10 kg



MOUNTED ON BASE

Version2.1.JL030916



LOOK US UP ONLINE