


## TRANSAXLE CUT-AWAY, DIRECT SHIFT

N98-ND11064

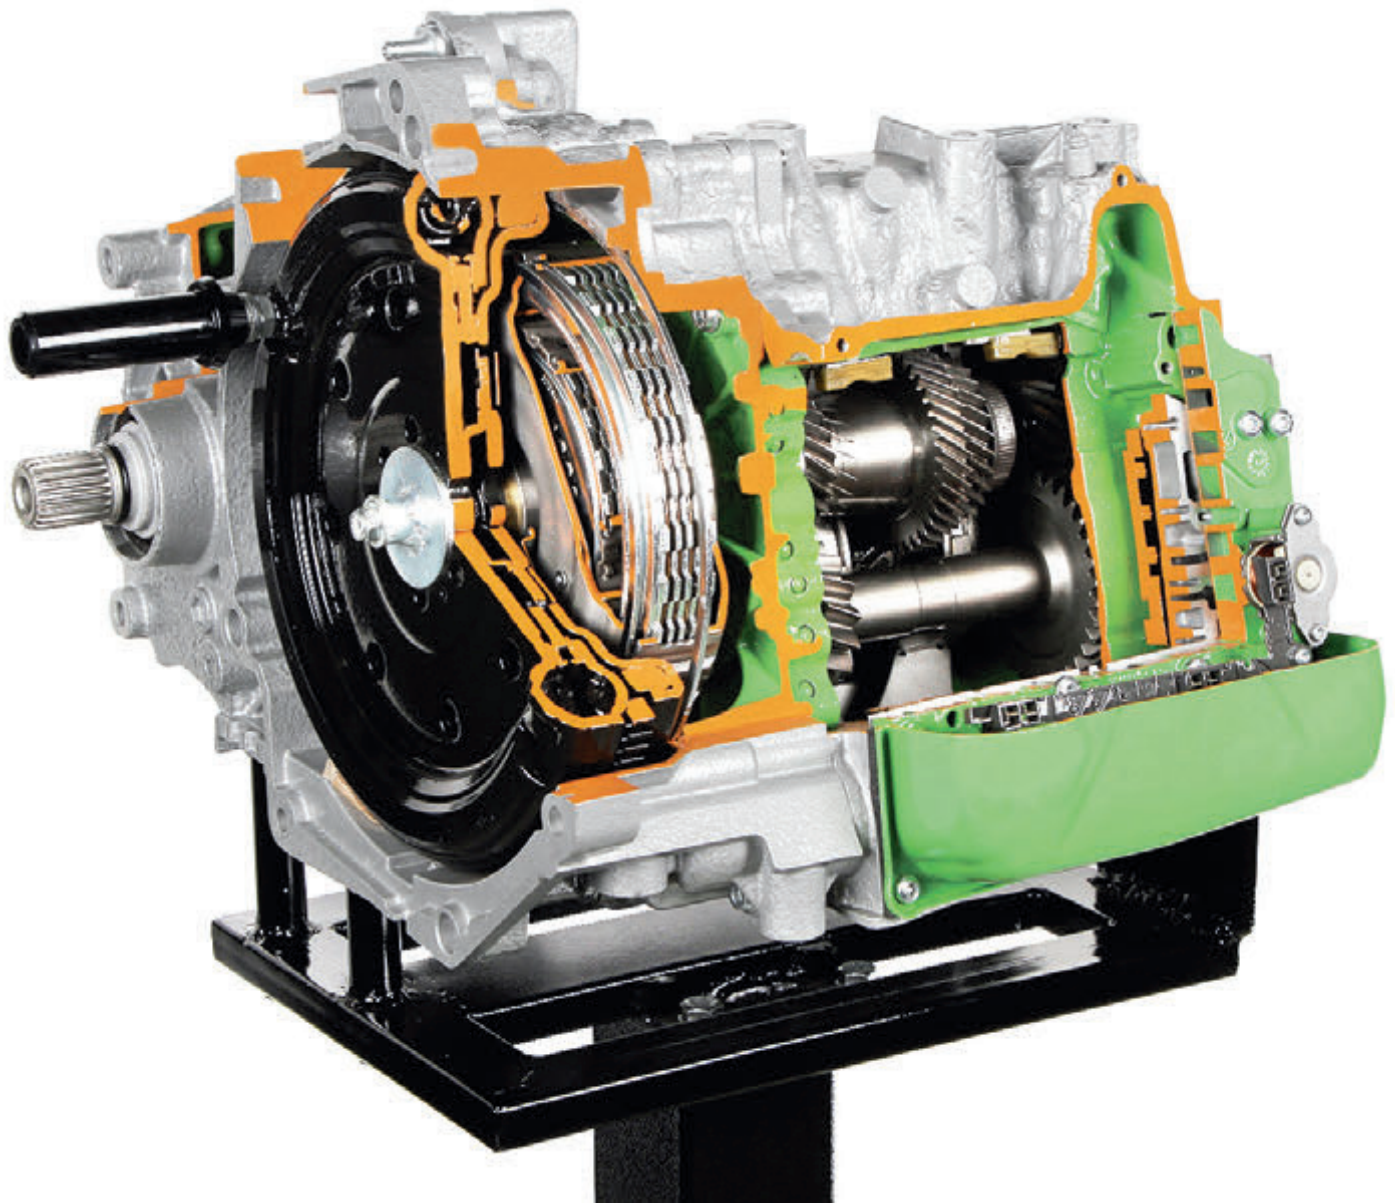

The Direct-Shift Gearbox (also referred to as double-clutch gearbox) has two main shafts; one for the odd gears and the other for the even gears. Each shaft is inserted into one of the discs of the coaxial clutches. The shafts connected to the clutches can transmit motion mechanically to an auxiliary shaft having the relevant speed-gears.

### WEIGHT & DIMENSIONS

80cm x 40cm x 70cm (L x W x H)

Net Weight: 60 kg

Gross Weight: 85 kg



MOUNTED ON STAND  
WITH WHEELS

Version2.1.JL030916



LOOK US UP ONLINE