


# TIPTRONIC GEARBOX CUT-AWAY

N98-ND11066

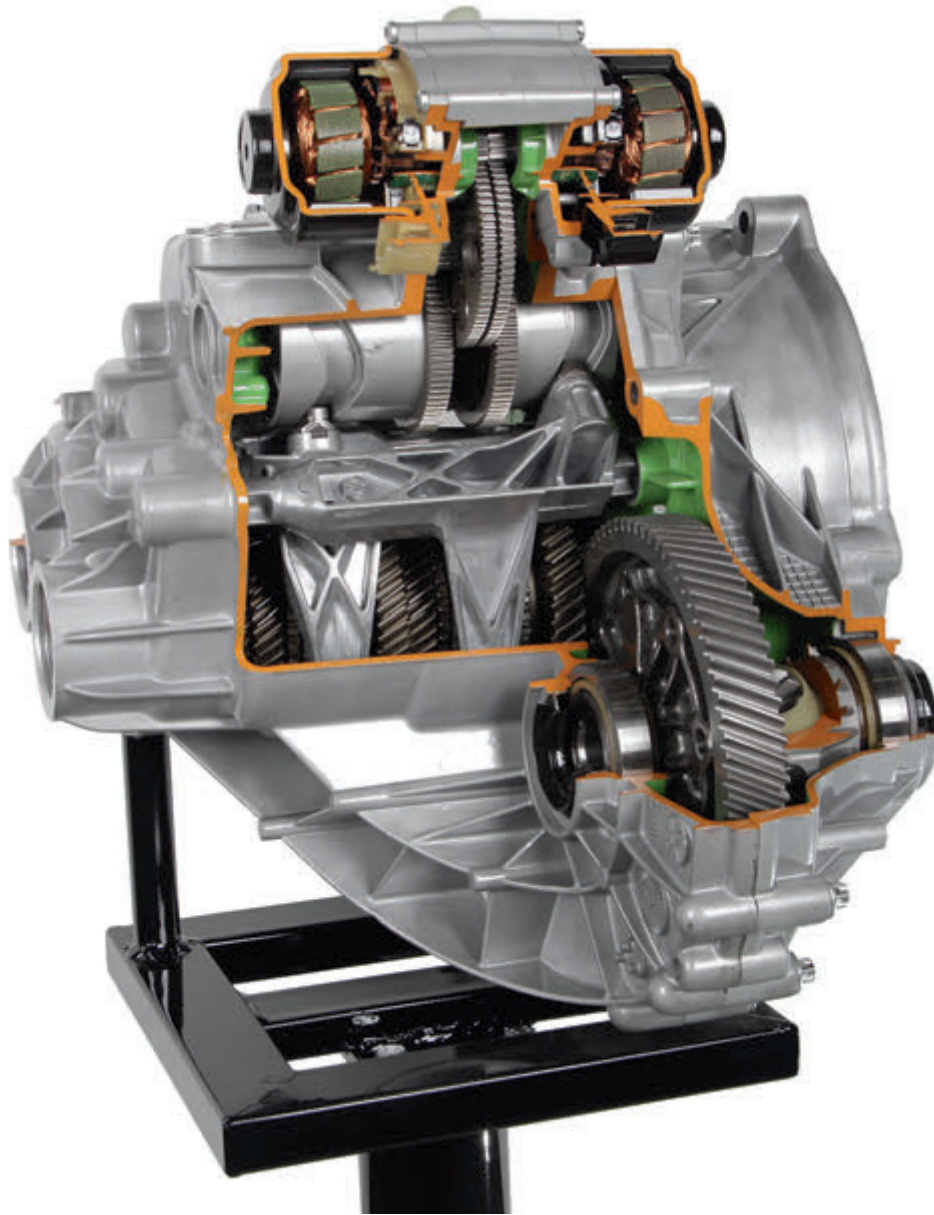

The manumatic gearbox is an electronically assisted manual gearbox in which the driver's command is translated into motion of the clutch sleeve timers by means of levers similar to those of a mechanical gearbox, operated by electro-magnetic, electro-hydraulic or electro-pneumatic actuators.

## WEIGHT & DIMENSIONS

60cm x 50cm x 80cm (L x W x H)

Net Weight: 35 kg

Gross Weight: 55 kg

MOUNTED ON STAND  
WITH WHEELS

Version2.1.JL030916



LOOK US UP ONLINE