


# TRANSAXLE CUT-AWAY, HEAVY-DUTY ECOSPLIT 16 SPEED + 2 REVERSE

N98-ND11069

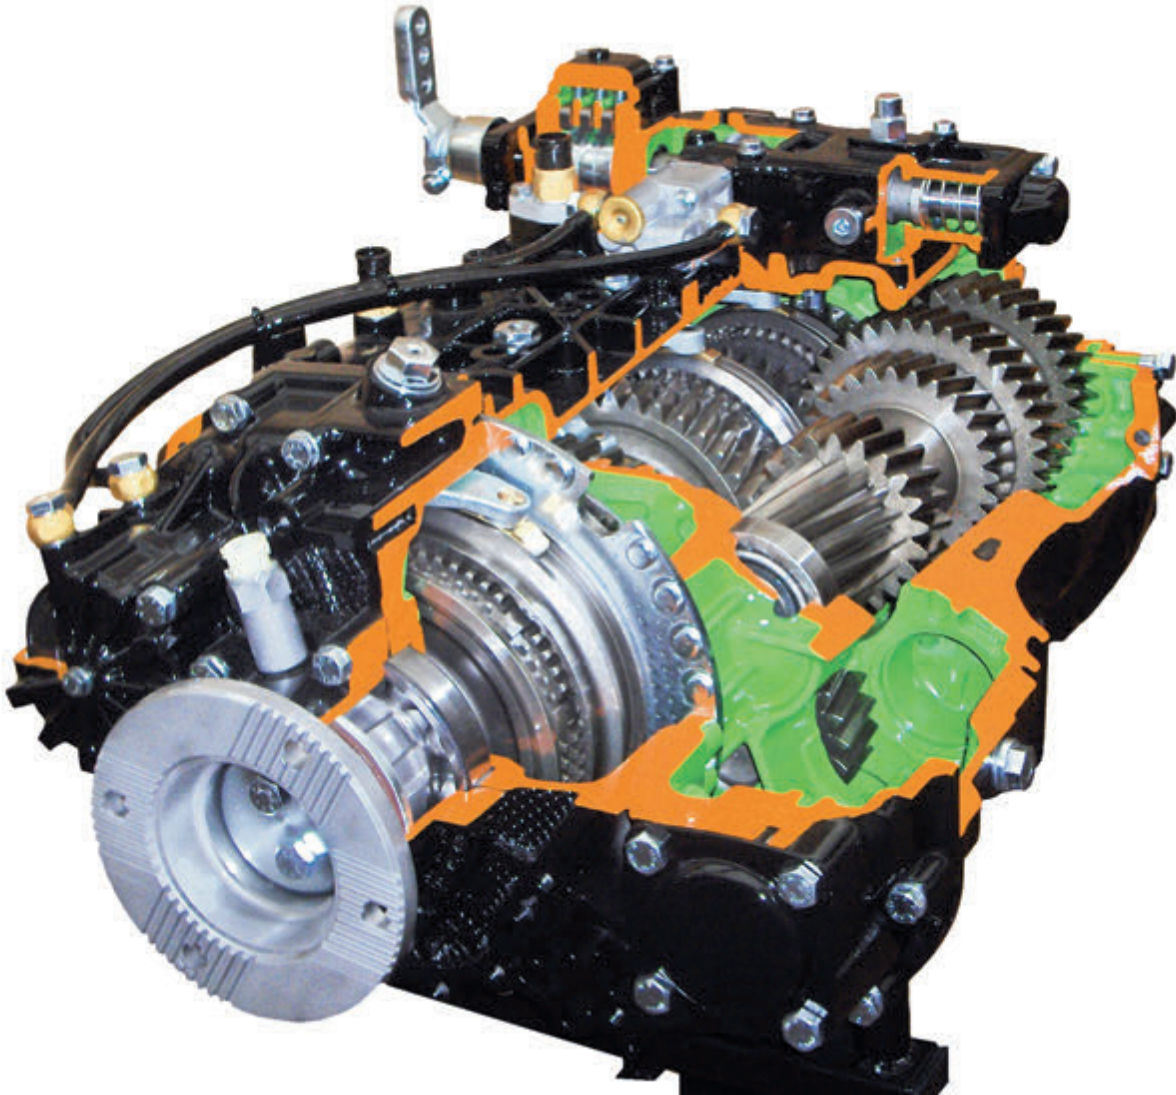

The 16 speed manual transmission for heavy-duty vehicles is composed of a central box containing 4 forward speed gearings and 2 reverse speed gearings, an epicyclic unit for selecting the speed-gears mounted on the base and over-gear on top. The over-gear configuration results in the division of each gear into slow or fast obtaining 16 forward gears, which can be inserted and geared down in sequence.

This cut-away model has been carefully sectioned for training purposes and professionally painted with different colors to better differentiate the various parts. Many parts have been chromium plated and galvanized for a longer life. The model is operated manually by hand cranked and mounted on a stand with wheels.

## WEIGHT & DIMENSIONS

90cm x 110cm x 130cm (L x W x H)

Net Weight: 280 kg

Gross Weight: 380 kg



MOUNTED ON  
STAND WITH WHEELS

Version2.1.JL011216



LOOK US UP ONLINE