


BRAKING SYSTEM PANEL, DOUBLE CIRCUIT

N98-ND12050

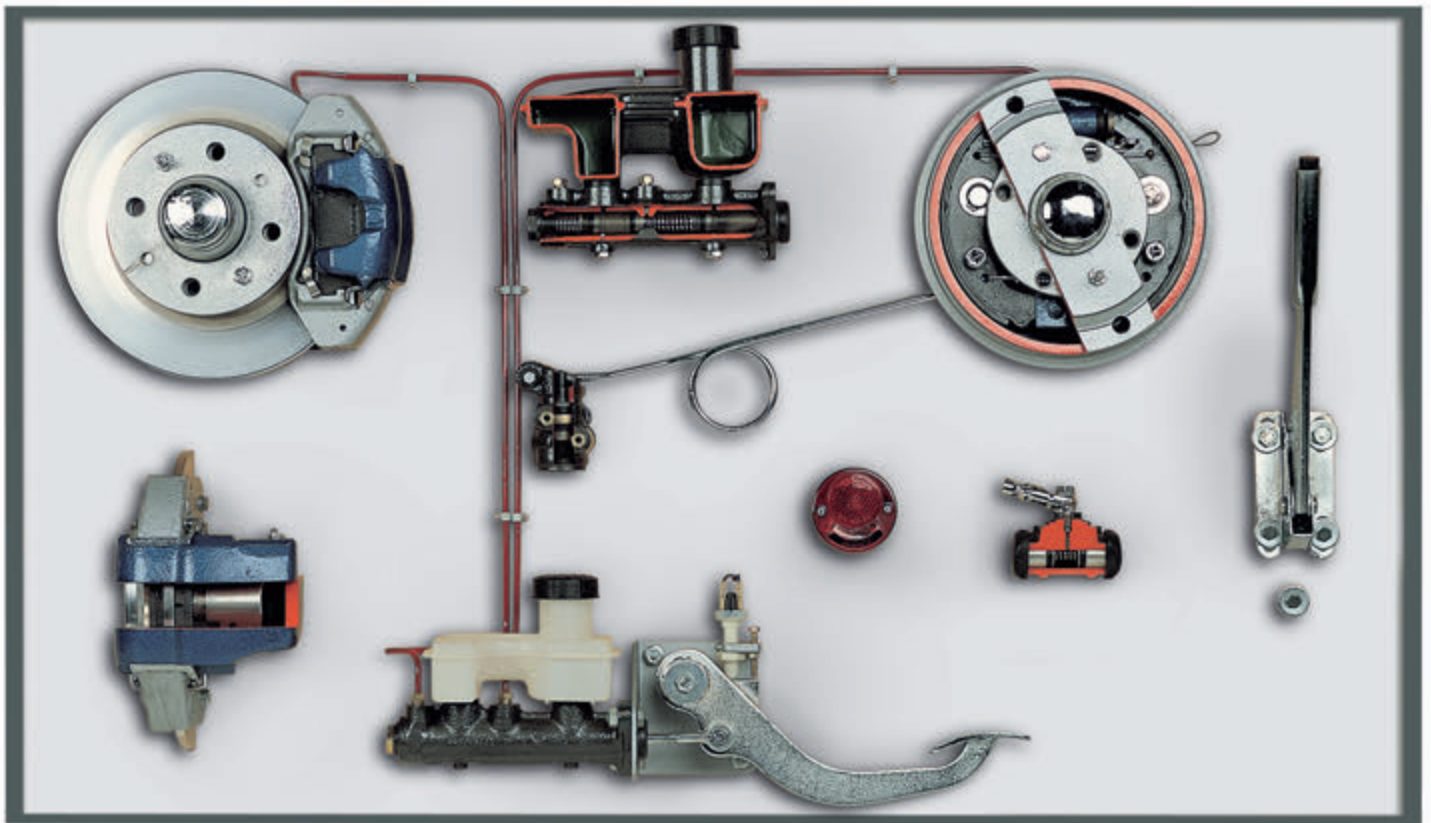

Wall panel representing a double circuit braking system. As in real conditions, it is operated by a hydraulic pump connected to the disk brake and a drum brake. A braking adjuster is placed between the pump and the (rear) drum brake in the circuit in order to avoid rear wheel lock-up during the braking phase.

The same devices used in the circuit have been sectioned and added in the panel to clearly show their operation.

WEIGHT AND DIMENSIONS

110cm x 60cm x 40cm (L x W x H)

Net Weight: 35 kg

Gross Weight: 65 kg



MOUNTED ON WALL
PANEL

Version2.1.JL031116



LOOK US UP ONLINE