


TURBO DIESEL ENGINE CHASSIS, FIAT, FWD

N98-ND6176

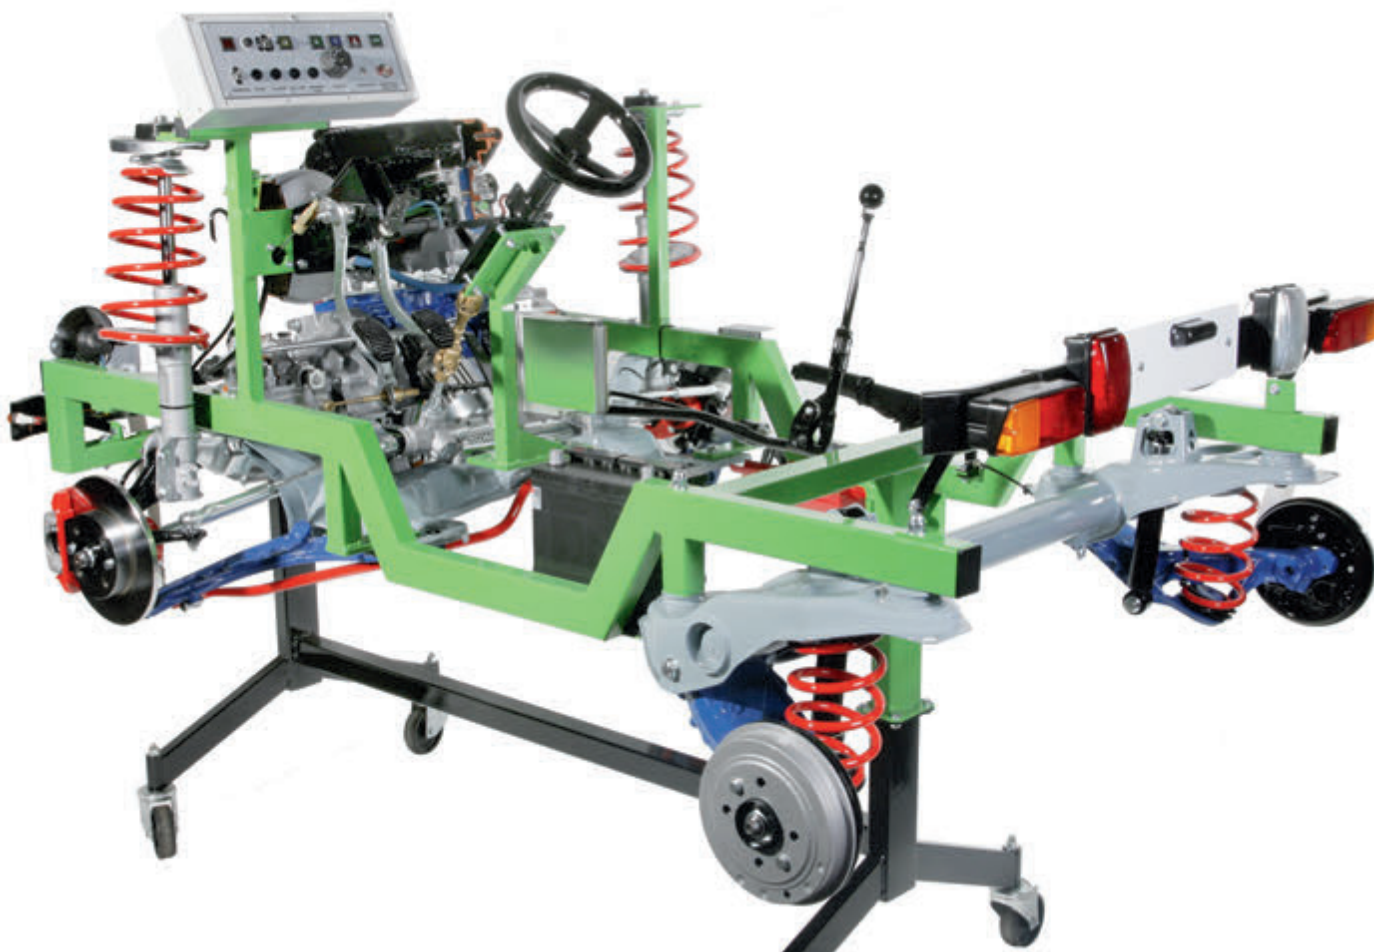

The FIAT chassis is a cut-away with FWD and a transversely mounted turbo diesel engine. This cross-sectioned model is mounted on a sturdy stand with wheels.

SPECIFICATIONS

- FIAT chassis with FWD (engine transversely mounted)
- Diesel engine displacement: 1700 cu. cm.; 4-cylinder
- Indirect injection with pre-chamber
- Bosch VE rotary injection pump
- Turbo-compressor with waste-gate valve
- Gearbox: 5 forward speeds + reverse + differential
- Hydraulic power steering with double-jointed steering column
- Radiator with electric fan
- Front disc brake
- Rear drum brake
- Independent wheels McPherson front suspension with oscillating arms
- Rear independent suspensions with coil spring and gas shock absorbers
- Mounted on a sturdy stand with wheels
- Electrically operated at 120V



OPERATES
ELECTRICALLY



MOUNTED ON
STAND WITH WHEELS

WEIGHT AND DIMENSIONS

220cm x 160cm x 115 cm (L x W x H)

Net Weight: 290 kg

Gross Weight: 400 kg

Version2.1.JL011116



LOOK US UP ONLINE