




TRANSMISSION CUT-AWAY AUTOMATIC, 3 SPEED + REVERSE

N98-ND11040

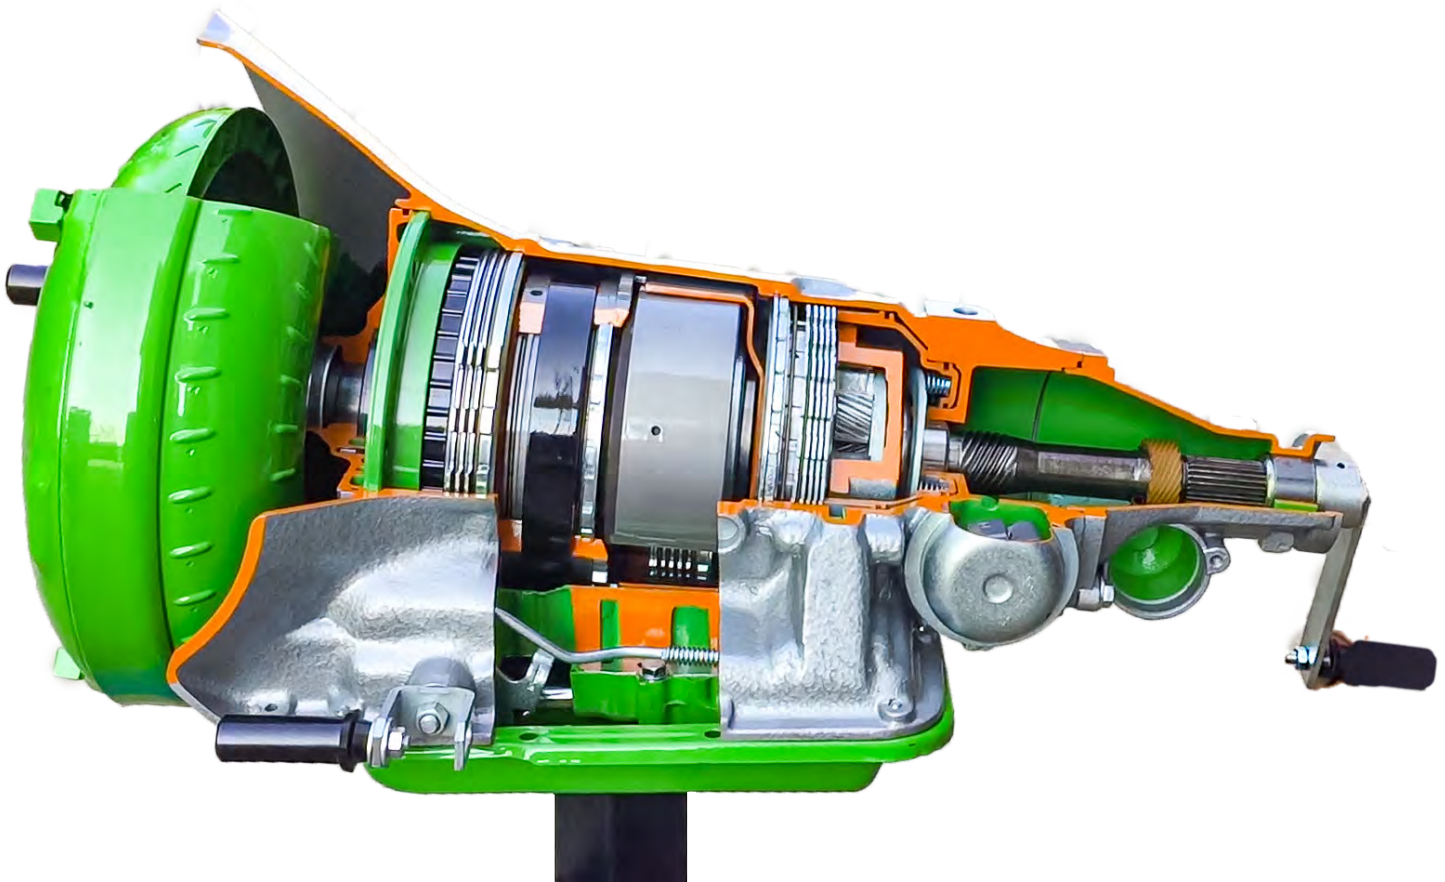

This is a cut-away of a 3 speed automatic transmission. It is carefully sectioned for training purposes. Colors are used to differentiate between parts. Many parts have been chromium plated and galvanized for a longer life.

SPECIFICATIONS

- Hydraulic converter
- Epicycloidal gear change with 3 forward speeds plus reverse
- Multiple-plate clutches • Control valves
- Operated manually by hand crank applied on the converter
- Mounted on stand with wheels

WEIGHT AND DIMENSIONS

Size: 100cm x 65cm x 70cm (L x W x H)

Net Weight: 70 kg

Gross Weight: 100 kg



MOUNTED ON STAND
WITH WHEELS