

TOYOTA 4-CYLINDER GAS ENGINE WITH VARIABLE VALVE TIMING, INDIRECT INJECTION, ELECTRICAL OPERATION

N98-ND5181E



This is a 4-Cylinder Toyota Gas Engine with Variable Valve Timing with Intelligence (VVT-i), Indirect Injection. The VVT-i system varies the timing of the intake valves by adjusting the relationship between the camshaft drive and intake camshaft.

SPECIFICATIONS

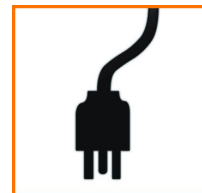
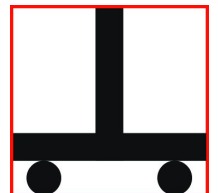
- Toyota 4-Cylinder Gas Engine
- Displacement: 1,000-1,300cc
- DOHC (Double Overhead Camshaft)
- Indirect Injection
- VVT-i System with Electronically Controlled Intake Valves
- Roller Chain
- Multipoint Electronic Injection with Throttle
- 12V Alternator
- Thermostatic Valve
- Mounted on Stand with Wheels
- Operated Electrically at 120V

WEIGHT AND DIMENSIONS

Size: 70cm x 90cm x 100cm (L x W x H)

Net Weight: 60 kg

Gross Weight: 120 kg

ELECTRICALLY
OPERATED

STAND WITH WHEELS

Version 2.3.SB071019

